


VS500/501/502 GS500/501/502 Control Reference Card

Circ Operation

Initial Start-up

When your spa is first actuated, it will go into Priming mode, indicated by "Pr." Please see the M-7 Installation Instruction Manual for complete instructions on Power-up and Pump Priming. The Priming mode will last for less than 5 minutes (press "Temp" or "Set" to skip Priming Mode) and then the spa will begin to heat the spa and maintain the water temperature in the Standard mode.

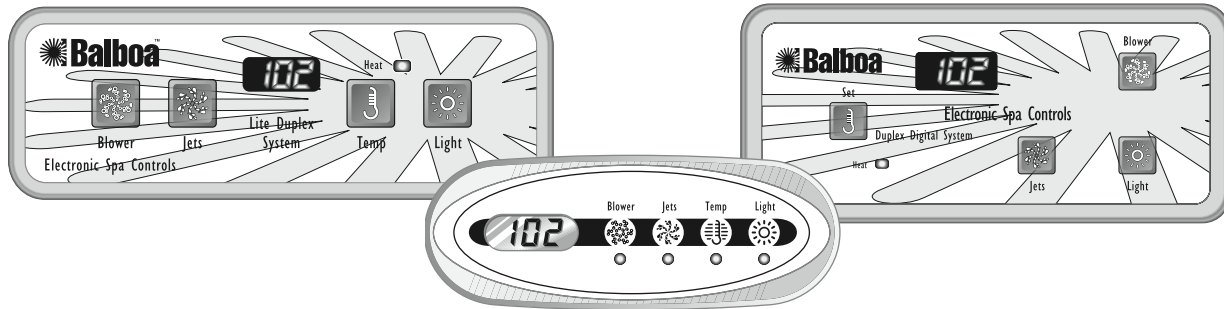

VS500/501 and GS500/501 - Your system has a 24-hour circ pump. The circ pump and the ozone generator run continuously.

VS502 and GS502 - Your system has a 24-hour circ pump. The circ pump and the ozone generator run continuously with the exception of shutting off for 30 minutes at a time in hot environments.

Temp/Set (80°F - 104°F / 26°C - 40°C)

The start-up temperature is set at 100°F/37°C. The last measured temperature is constantly displayed on the LCD.

Note that the last measured spa temperature displayed is current only when the circ pump has been running for at least 2 minutes.

To display the set temperature, press the "Temp" or "Set" pad once.

To change the set temperature, press the pad a second time before the LCD stops flashing. Each press of the "Temp" or "Set" pad will continue to either raise or lower the set temperature. If the opposite direction is desired, release the pad and let the display revert to the current water temperature. Press the pad to display the set temperature, and again to make the temperature change in the desired direction.

After three seconds, the LCD will stop flashing and display the current spa temperature.

Note: If there is not a blower on the system, an alternate panel with separate "Up" and "Down" buttons in place of a "Set" or "Temp" button may be used. Simply press "Up" or "Down" where a "Temp" or "Set" button press is indicated.

Jets

Touch the "Jets" button once to turn pump 1 on or off, and to shift between low and high speeds (if equipped). If left running, the low speed of the pump will automatically turn off after 4 hours, and the high speed will automatically turn off after 15 minutes.

Blower (optional on VS501/502 or GS501/502)

This button is used to turn the blower on and off. If left on, the blower automatically turns off after 15 minutes.

Jets 2 (optional on VS501/502 or GS501/502)

If your system has a pump 2 installed instead of a blower, it behaves exactly like a blower would.

Light

Press the "Light" button to turn the light on and off. If left on, the light automatically turns off after 4 hours.

Mode

Mode is changed by pressing the "Temp" or "Set" button, then pressing the "Light" button.

Standard Mode is programmed to maintain the desired temperature. Note that the last measured spa temperature displayed is current only when the circ pump has been running for at least 2 minutes. "5E" will be displayed momentarily when you switch into Standard Mode.

Economy Mode heats the spa to the set temperature only during filter cycles. "Ec" will display solid when temperature is not current, and will alternate with temperature when temperature is current.

Sleep Mode heats the spa to within 20°F/10°C of the set temperature only during filter cycles. "SL" will display solid when temperature is not current, and will alternate with temperature when temperature is current.

Preset Filter Cycles

The first filter cycle begins 6 minutes after the spa is energized. The second filter cycle begins 12 hours later. Filter duration is programmable for 2, 4, 6, 8 hours or for continuous filtration (indicated by "FL"). The default filter time is 2 hours.

To program, press "Temp" or "Set," then "Jets." Press "Temp" or "Set" to adjust. Press "Jets" to exit programming.

At the beginning of each filter cycle the blower purges for 30 seconds; the pump purges for 5 minutes. The only effect filter duration has is: 1) During the filter, the circ pump never turns off, and 2) In Economy and Sleep Modes, heating only occurs during the filter cycle.

Freeze Protection

If the temperature sensors detect a drop to below 44°F/6.7°C within the heater, the pump and blower will automatically activate to provide freeze protection. The equipment stays on until 4 minutes after the sensors detect that the spa temperature has risen to 45°F/7.2°C or higher. In colder climates, an optional additional freeze sensor may be added to protect against freeze conditions that may not be sensed by the standard sensors. Aux freeze sensor protection acts similarly except with the temperature thresholds determined by the switch and without a 4-minute delay in turnoff. See your dealer for details.

(over)

Diagnostic Messages

Message	Meaning	Action Required
	No message on display. Power has been cut off to the spa.	The control panel will be disabled until power returns. Spa settings will be preserved until next power up.
--	Temperature unknown.	After the circ pump has been running for 2 minutes, the temperature will be displayed.
HH	"Overheat" - The spa has shut down. One of the sensors has detected 118°F/48°C at the heater.	DO NOT ENTER THE WATER. Remove the spa cover and allow water to cool. Once the heater has cooled, reset by pushing any button. If spa does not reset, shut off the power to the spa and call your dealer or service organization.
OH	"Overheat" - The spa has shut down. One of the sensors has detected that the spa water is 110°F/43°C.	DO NOT ENTER THE WATER. Remove the spa cover and allow water to cool. At 107°F/42°C, the spa should automatically reset. If spa does not reset, shut off the power to the spa and call your dealer or service organization.
IC	"Ice" - Potential freeze condition detected.	No action required. The pump and blower will automatically activate regardless of spa status.
SA	Spa is shut down. The sensor that is plugged into the Sensor "A" jack is not working.	If the problem persists, contact your dealer or service organization. (May appear temporarily in an overheat situation and disappear when the heater cools.)
Sb	Spa is shut down. The sensor that is plugged into the Sensor "B" jack is not working.	If the problem persists, contact your dealer or service organization. (May appear temporarily in an overheat situation and disappear when the heater cools.)
Sn	Sensors are out of balance. If alternating with spa temperature, it may just be a temporary condition. If flashing by itself, spa is shut down.	If the problem persists, contact your dealer or service organization.
HL	A significant difference between temperature sensors has been detected. This could indicate a flow problem.	Check water level in spa. Refill if necessary. If the water level is okay, make sure the pumps have been primed. If problem persists, contact your dealer or service organization.
LF	Persistent low flow problems. (Displays on the fifth occurrence of "HL" message within 24 hours.) Heater is shut down, but other spa functions continue to run normally.	Follow action required for "HL" message. Heating capability of the spa will not reset automatically; you may press any button to reset.
dr	Possible inadequate water, poor flow, or air bubbles in detected in the heater. Spa is shut down for 15 minutes.	Check water level in spa. Refill if necessary. If water level is okay, make sure the pumps have been primed. Press any button to reset, or this message will automatically reset within 15 minutes. If problem persists, contact your dealer or service organization.
dy	Inadequate water detected in heater. (Displays on third occurrence of "dr" message.) Spa is shut down.	Follow action required for "dr" message. Spa will not automatically reset. Press any button to reset.

Warning! Shock Hazard! No User Serviceable Parts.

Do not attempt service of this control system. Contact your dealer or service organization for assistance. Follow all owner's manual power connection instructions. Installation must be performed by a licensed electrician and all grounding connections must be properly installed.

